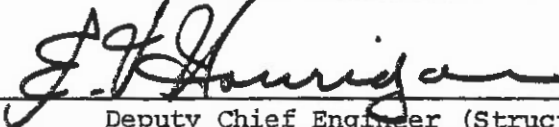


<p>TO: SUPERSEDED BY EB 97-020 EFFECTIVE 4/4/1997 MAIN OFFICE</p> <p>AND</p> <p>REGIONAL OFFICES</p>	<h1>ENGINEERING INSTRUCTION</h1> <p>NEW YORK STATE DEPARTMENT OF TRANSPORTATION</p>
<p>Distribution: <input checked="" type="checkbox"/> Main Office <input checked="" type="checkbox"/> Regions <input type="checkbox"/> Special</p>	<p>Code: <u> EI 76-29 </u></p>
<p>APPROVED:  Deputy Chief Engineer (Structures)</p>	<p>Date: <u> 4/16/76 </u></p> <p>Supersedes:</p>

The following changes shall be made to the BAR LIST PROGRAM USER'S MANUAL.

1. When selecting a bar bending diagram, the simplest diagram adequate for describing the bar shall be chosen. For example, in describing an L-shaped bar, a Type 9 diagram with one zero input shall be selected, rather than a Type 11 diagram with numerous zero inputs. This paragraph shall be placed on page 3 as paragraph 14.
2. On page 2, paragraph 11 shall be deleted and replaced by "Minus DIMENSIONS shall not be USED for any dimensions in this program."
3. On page 19, the third note shall be deleted and replaced by "MINUS DIMENSIONS shall not be input."
4. On page 27, delete examples 5AFT2 and 5AFT3 from SAMPLES FOR BAR TYPE 11.
5. On page 28, delete examples 5APS4 and 5APS6 from SAMPLES for BAR TYPES 15 and 16.